



Star Projector Nature Sounds Clock

INSTRUCTION MANUAL

7. BATTERY INFORMATION

- This product uses 3 x AA size batteries (not included)
- Alkaline manganese batteries recommended
- A) Open the battery door located at the back of the clock
- B) Remove the old batteries and insert 3 new AA size batteries.
Observe polarity (+ -) sign when installing battery
- Replace the battery door
- Use only designated battery type. Do not use re-chargeable batteries.
Do not mix battery types
- Read instructions carefully and install batteries correctly observing the polarity (+ -) sign to avoid leakage
- Always replace sets of batteries at the same time.
Do not mix old and new batteries
- Do not attempt to recharge non-rechargeable batteries
- Remove batteries from the product when it will not be used for an extended period of time to avoid leakage
- Remove exhausted battery to avoid leakage
- Do not short out battery contacts
- Do not dispose of batteries in fire
- Do not immerse electrically operated products in water or other liquid.
Wipe clean only

Please retain this information for future reference

LIFEMAX LTD.

The Business Centre,
Brimpton Lane,
Brimpton, Reading,
RG7 4TN, England.
www.lifemaxuk.co.uk



Getting started

Remove the battery door from the clock back and fit 3 x AA batteries observing the polarity (+/-) signs. Replace the battery door. Please read the section under battery information.

Try the sounds options by using the buttons on the clock front:
Press "**SOUND ON / OFF**" to hear the sound.
Press "**SELECT**" to choose the sound.
Press "**VOLUME**" repeatedly to increase or reduce the volume.
Press "**SOUND ON / OFF**" to turn the sound off.

You can also use the nature sounds to soothe you to sleep.
The sound will turn off automatically after 30 minutes.

1. To set the time and date

Remove the battery door from the clock back and fit 3 x AA batteries observing the polarity (+/-) signs. Replace the battery door. Please read the section under battery information.

Please Note: During the setting of the clock it will return to non-set mode if no button is pressed for about 90 seconds.

1.1 - Select 12 or 24 hour mode

Press the "MODE" button once on the clock front. "12Hr" will flash. Press the "SNOOZE" button to change to 24-hour mode or back to 12-hour mode. Then press "SET" to confirm and move to hour setting.

1.2 - Set hour

If the hour digit is not flashing press the "MODE" button once and then press the "SET" button once to start the hour digit flashing. Press the "SNOOZE" button to select the correct hour. Then press "SET" to confirm and move to minute setting.

1.3 - Set minute

If the minute digit is not flashing press the "MODE" button once and then press the "SET" button twice to start the minute digit flashing. Press the "SNOOZE" button to select the correct minute. Then press "SET" to confirm and move to year setting.

1.4 - Set year

If the year digit is not flashing press the "MODE" button once and then press the "SET" button 3 times to start the year digit flashing. Press the "SNOOZE" button to select the correct year. Then press "SET" to confirm and move to month setting.

1.5 - Set month

If the month digit is not flashing press the "MODE" button once and then press the "SET" button 4 times to start the month digit flashing. Press the "SNOOZE" button to select the correct month. Then press "SET" to confirm and move to date setting.

1.6 - Set date

If the date digit is not flashing press the "MODE" button once and then press the "SET" button 5 times to start the date digit flashing. Press the "SNOOZE" button to select the correct date. Then press "SET" to confirm. Finally press "MODE" 4 times to return to normal date & time display.

2. To set the alarm time

Press the "ALARM" button once on the clock front.

2.1 - To set the alarm time hour

Press the "SET" button. The hour digit will flash. Press the "SNOOZE" button to select the correct alarm time hour. Then press "SET" to confirm and move to alarm time minute setting.

2.2 - To set the alarm time minute

If the alarm time minute digit is not flashing press the "ALARM" button once, then press the "SET" button twice. The alarm time minutes will flash. Press the "SNOOZE" button to select the correct alarm time minutes. Then press "SET" to confirm. Finally press "MODE" 3 times to return to normal date & time display.

2.3 - To switch the snooze on/off

Press "SNOOZE" button the "Zz" icon will be displayed when the snooze feature is selected.

2.4 - To switch the alarm off

The alarm is on when the alarm time is set and will sound at the alarm time. To turn the alarm off press "ALARM" and then press "SET" button 5 times (the display will show - : -). Finally press "MODE" 3 times to return to normal date & time display.

2.5 - Alarm sound and snooze

If the snooze function is selected the alarm will sound again about every 3 minutes for a total of 4 times. During the alarm sound press any button (except the "SELECT", "SNOOZE" and "VOLUME" button) to stop the alarm.

3. Event reminder setting

In normal date & time display, press the "MODE" button 3 times to enter event reminder mode.

3.1 - Event reminder hour setting

Press the "SET" button to start the hour digit flashing. Press "SNOOZE" button to select the correct hour. Then press "SET" to confirm and move to minute setting.

3.2 - Event reminder minute setting

The minute digits will flash. Press the "SNOOZE" button to select the correct minute. Then press "SET" to confirm and move to year setting.

3.3 - Event reminder year setting

The year digits will flash. Press the "SNOOZE" button to select the correct year. Then press "SET" to confirm and move to month setting.

3.4 - Event reminder month setting

The month digits will flash. Press the "SNOOZE" button to select the correct month. Then press "SET" to confirm and move to date setting.

3.5 - Event reminder date setting

The date digits will flash. Press "SNOOZE" button to select the correct date. Then press "SET" to confirm. Finally press "MODE" twice to return to normal date & time display.

3.6 - How to turn off event reminder

The event reminder alarm is on when the event time and date is set and will sound at the event time for 5 minutes. To turn the event alarm off press "MODE" 3 times and then press the "SET" button 7 times (the display will show - : -). Finally press "MODE" twice to return to normal date & time display.

4. Countdown timer setting

Press the "MODE" button 4 times to enter countdown timer mode.

4.1 Countdown timer hour setting

Press the "SET" button to start the hour digit flashing. Press "SNOOZE" button to set hour. Then press "SET" to confirm and move to minute.

4.2 Countdown timer minute setting

The minute digits will flash. Press "SNOOZE" button to set minute. Then press "SET" to start countdown. Finally press "MODE" to return to normal date & time display.

4.3 - How to turn off countdown timer

Press "MODE" 4 times to enter "Countdown" mode. Then press "SET" 4 times to turn off the countdown timer (the display will show - : -). Finally press "MODE" to return to normal date & time display.

5. Temperature

The temperature is shown on the screen. To change between Centigrade and Fahrenheit press and hold the "SET" button

6. To turn on the star projector

Press the "STAR" button to turn on the star projector. This will project a night star display onto the ceiling in a dark environment. These will change colour. Press the "STAR" button again to turn off.