


Lifemax Projection Humidifier

8. Press and hold the LIGHT button to turn on the projector. Press the LIGHT button again to choose between 7 different colours and a colour change mode. Press and hold again to switch off.


9. The Humidifier and Light functions are independent and therefore can be used separately or together.



If the inner lid becomes separated from the outer lid, follow the below instructions to reassemble




To change the projection lens

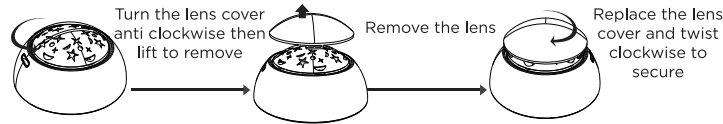


Product Name: Projection Humidifier	Mist mode with 1, 3 and 5 hour timer
Product Size: 12 x 12 x 10.8cm	Power of the main unit: $\leq 10W$
Net weight: 200g	Atomizing vibration frequency: 2.4MHz
Power: standard dedicated adapter	Effective usage area: 10-15 sqm, approx.
Adapter power input: AC100-240V-50/60Hz 0.4A MAX	
Adapter power output: DC 24V/0.6A	
Rated power of the adaptor: $\leq 14.5W$	Made in China

Lifemax Projection Humidifier


Do not use on unlevel or unsteady surfaces

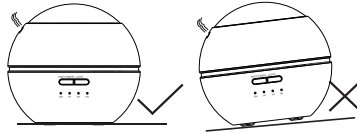


If water gets into the air inlet by accident, turn the power off and let the excess water drain from the water overflow outlet. Leave until the unit has dried fully then reuse as normal.

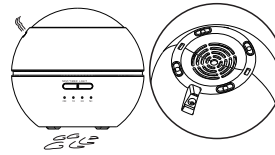

The internal workings of this product are not user serviceable. Do not attempt to disassemble the product. If a fault occurs please contact your retailer.

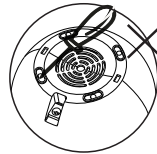


This product is not a medical ventilator and should not be used as such. Do not inhale mist directly from the product.

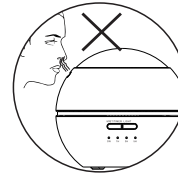

Do not scratch, bend, warp or pull wires connected to the power adapter. Do not place under high temperatures. Do not place heavy objects on the power cable. If the adapter or its cable are damaged, do not use.

Should you wish to clean your Projection Humidifier, wipe clean with a damp cloth. Do not use cleaning agents or detergents, especially in the water tank as this can cause harmful gases to be given off.

Should you wish to fill or clean the product, please ensure the power socket is unplugged from the mains before doing so.

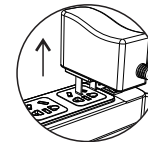

Keep out of reach of children

Do not remove the lid when in use

Do not touch the ultrasonic atomizer plate with any hard or sharp objects as this may cause irreparable damage to the product.

Please follow these safety guideline closely when using your product

LIFEMAX LTD
1 PIPERS COURT, RG19 4ER
WWW.LIFEMAXUK.CO.UK
RETAIN FOR REFERENCE



Lifemax Warranty Card

1705 - Projection Humidifier

In the unlikely event that your Lifemax product develops a manufacturing fault, it is covered by a one year return to base warranty when you return this card.

Your warranty is only valid with the original receipt, please ensure you keep this safe. The warranty runs from the date of purchase.


If your product develops a defect during the warranty period, please call 01635 874323 for further advice. If requested, please securely pack your item and return enclosing your contact details, your proof of purchase and fault details.

We will, at our discretion, repair or exchange the item in line with warranty legislation. Where no proof of purchase is provided, or the product is outside the warranty period, repairs/replacements will be offered at cost to the customer.

Name	
Address	
Telephone	
Email	
Retailer	
Date of Purchase	

We would like to keep you up to date with other helpful products. If you would rather we did not please tick here:

Lifemax Projection Humidifier

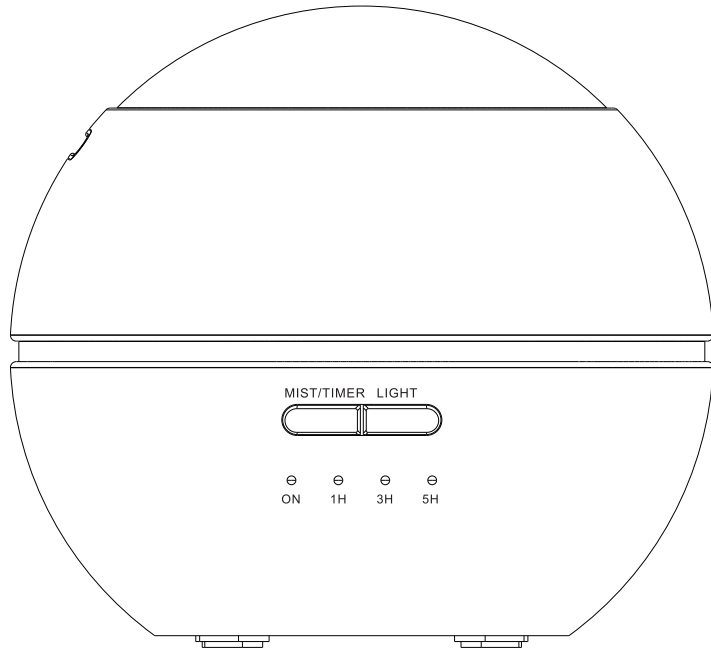


www.lifemaxuk.co.uk



Lifemax Projection Humidifier

The parts of your Projection Humidifier

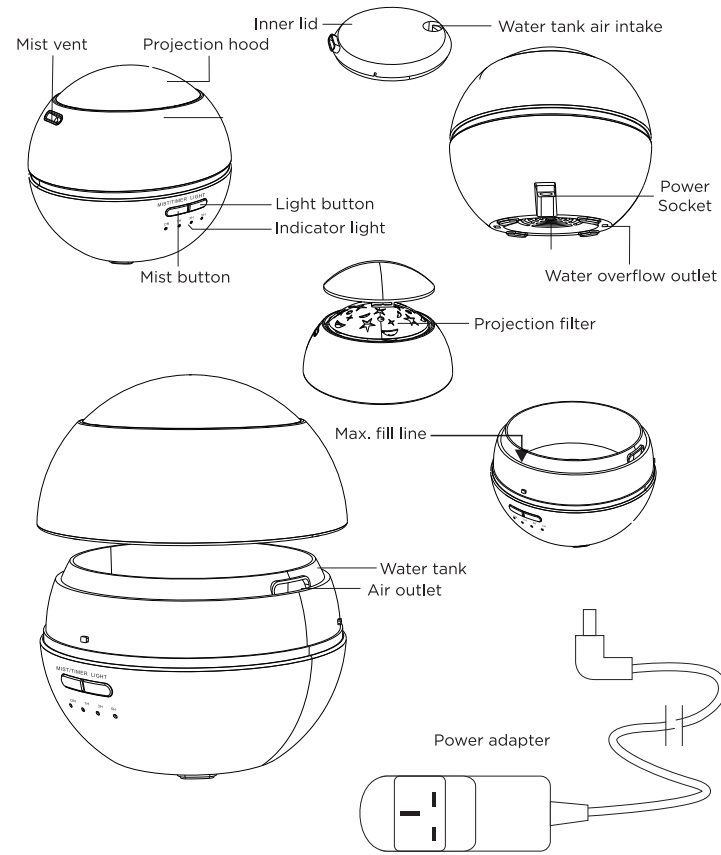



1




Lifemax Projection Humidifier

How to use your Projection Humidifier


1. Remove the lid by pulling it vertically whilst holding the base of the unit. Ensure that your Projection Humidifier is placed on a flat surface and is not tilted or leaning to one side.
2. Plug in the power adapter at the base of your Projection Humidifier, ensuring it is pushed in fully and seated correctly.

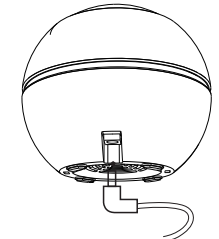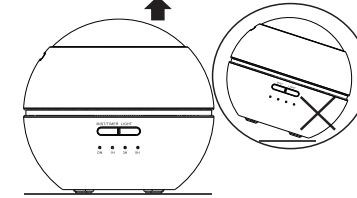


3. Fill your Projection Humidifier using clean, cold water up to the maximum water fill line. When filling, ensure water only goes into the tank and not onto the exterior of your Projection Humidifier. Do not overfill and do not fill when the product is on.

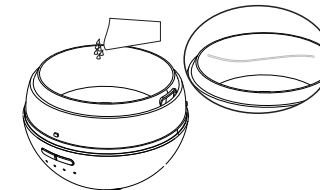


4. Should you wish to use essential oils in your Projection Humidifier, you can add them to the water tank at this point.
5. Replace the lid ensuring your Projection Humidifier is on a flat, level surface and ensuring that you do not lean or tilt in doing so to avoid leakage from the water tank.

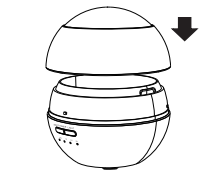

6. Connect the plug of the power adapter to a standard household power socket. Your projection Humidifier will beep once to notify you that the power has been connected.

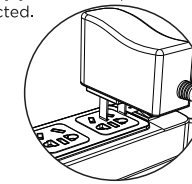

7. Press and hold the MIST/TIMER button to start enjoying your Projection Humidifier. Press the MIST/TIMER again to choose between 1, 3 and 5 hour timers. Press and hold again to switch off.

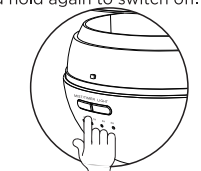

2