


INSTRUCTIONS

OPTIMAX JOYSTICK

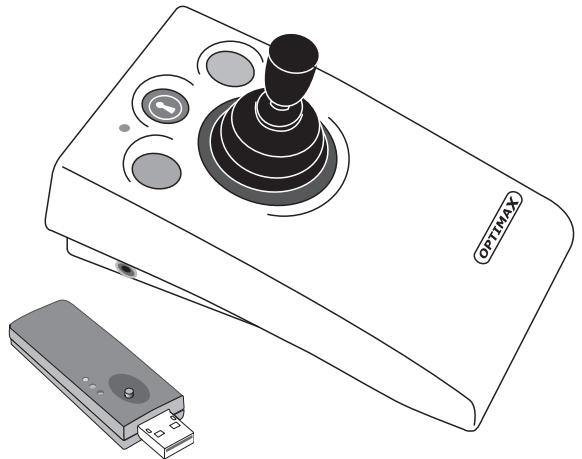

Pack Contents

Carefully check the contents of the box, which are:

- **OPTIMAX JOYSTICK unit**
- **USB Charging Cable**
- **RECEIVE:2**
- **T-Bar handle**
- **Soft ball handle.**
- **This manual**

OPTIMAX JOYSTICK is the first wireless joystick specifically designed for users with motor skill difficulties.

With an operating range in excess of 10 metres the **OPTIMAX JOYSTICK** can be used as either a desktop or hand-held unit and is ideal for use

in team/group sessions, or classroom settings, to ensure everyone can participate.

The **OPTIMAX JOYSTICK** is specifically designed for

Product Description

cursor movement to respond to the lightest touch (0.5 Newtons) for accurate, cursor navigation and precise targeting of objects on the computer screen.

OPTIMAX JOYSTICK also benefits from a built-in lithium ion battery and advanced charging system, making single-use batteries a thing of the past and reducing the total cost of ownership. The unit is charged from any USB socket using the supplied cable and goes many months between charges.

Features

- State of the art radio link with an interference free operating range exceeding 10 metres.
- Built-in lithium battery and charger.
- Light touch joystick movement (0.5 Newtons).
- Four cursor speed settings.
- Low profile providing a natural hand-rest for comfortable operation.
- Left/Right and Drag Lock buttons plus optional Double-Click.
- Colour coded buttons mounted slightly below flush to prevent accidental operation.
- Mountable using industry standard mounting plates.
- Easy 'plug and play' installation (no additional drivers required).
- PC, Mac and Chromebook compatible, plus iPad/Android using adapter cables.

Compatibility

Optimax Joystick works with USB compatible computers including PCs, Macs, Chromebooks, Apple phones/tablets (via an adapter cable) and some Android phones/tablets (also via an adapter cable). It can also work in PS/2 sockets on legacy PCs using an adapter cable which is available from Pretorian Technologies or any authorised reseller.

Installation

Ensure your computer is fully turned-off and not just in sleep mode.

Locate the relevant PS2 or USB socket on your computer and plug-in your **OPTIMAX** Receiver unit (if you are using the PS2 socket on your computer you will need the USB/PS2 adaptor supplied).

To optimise the range of the radio link, do not place the Receiver unit behind your computer or close to large metal objects or sources of interference such as wireless network hubs, cellular telephones etc.

1. Ensure the internal battery is charged by plugging the unit into a USB socket via the

supplied charging cable. The LED on the Joystick unit lights green during charging and is extinguished once the battery is fully charged.

2. Turn on the computer and allow it to fully boot up. Check that the LED on the Receiver unit lights for a few seconds and is then extinguished.
3. Move the Joystick to check for cursor movement and if observed, your **OPTIMAX** is now ready for use. If there is no cursor movement, Pair the Joystick to the Receiver by referring to the Pairing section below.

Pairing



Your **OPTIMAX JOYSTICK** uses a unique addressing system to ensure that there is no interference from neighbouring units. The Joystick transmits its data along with an address, and the Receiver unit only responds to that address.

To function correctly, both the Joystick and Receiver unit must use the same address. The process of negotiating an address is called 'Pairing' and once learned, both the Joystick and Receiver units will retain the information even when powered off or when changing the battery.

Your **OPTIMAX JOYSTICK** is supplied already paired but it may occasionally be necessary to go through the process again - for instance if a new Receiver is to be used with an existing Joystick unit or in the unlikely event that one half 'forgets' the address.

To Pair the units, use the following procedure:

1. Remove the cover on the underside of the unit with a screwdriver.
2. Place the Joystick within one metre (three feet) of the Receiver unit.
3. Press the button on top of the receiver unit. The LED should flash.
4. Within 10 seconds, briefly press the button inside the battery compartment. It is not necessary to move the Joystick.
5. After a short period the LED should light steadily for 5 seconds and cursor operation should resume. Replace the cover on the underside and secure in place with a screwdriver.
6. If the LED stops flashing after around 15 seconds and does not light steadily, repeat the process from (3). If it is still not successful, please refer to the Troubleshooting section.

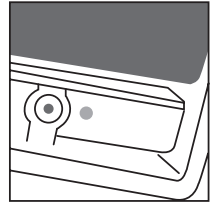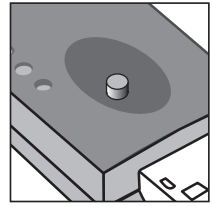

Battery Charging

Your **Optimax Joystick** is fitted with a state-of-the-art lithium ion battery and charger. The unit will operate for several months with a single charge. When the battery charge is getting low, the LED on the Joystick unit will flash red every few seconds. This is an indication that it's time to charge the battery soon. Locate the supplied charging cable and plug it into the charging port on the rear of the Optimax Joystick and then into a USB socket on a computer or charging plug. The LED lights green to show that charging has started and will be extinguished once fully charged.

Charging a battery that is completely flat takes about four hours and you can continue using the **Optimax Joystick** throughout the charging period, even from completely flat. Once fully charged, you may unplug the charging cable.

Should you mislay the charging cable, replacements can be purchased by asking your local electrical retailer for a camera connection lead. It has a USB type A plug at one end and a mini-USB plug at the other.

Note that Optimax Joystick plugs into a computer USB port for charging purposes only and no functional connection is made between the two devices.

Learn Mode

There are a number of settings to allow you to configure **Optimax Joystick** to your exact requirements. These are all programmed using Learn Mode and are stored in an internal memory so they are automatically recalled each time you use the unit, even if you swap computers or if the battery goes flat. To make changes to the settings, you must first go into Learn Mode. Press and hold the middle button until a beep is heard. The unit is now in Learn Mode and is able to accept changes to the settings, as follows:

Cursor Speed

To change the speed setting while in Learn Mode, press the middle button briefly. Each time you do so, the unit emits a beep and the speed changes immediately, allowing you to experiment until the best setting is found. There are 4 speed settings and pressing the middle button once the highest speed has been reached makes the unit begin again at the lowest speed.

Left-Handed Operation

The left and right buttons may be swapped around, which is particularly useful for left-handed users. To change this setting, press the left button while in Learn Mode. One beep indicates the unit is set to standard 'right-handed' mode, whereas two beeps indicates 'left-handed' operation.

Double Click

Right-click may be substituted with Double-Click, which is useful for users who have difficulty in double-clicking quickly enough for the computer to recognise. To change this setting, press the right button briefly while in Learn Mode. One beep indicates the unit is set to standard 'right-click' mode, whereas two beeps indicates 'Double-Click' operation.

All of the above settings may be changed as often as required while in Learn Mode, allowing you to experiment with the settings until the best configuration is found. Once you are happy with the settings, they may be stored in the unit's memory by pressing and holding the middle button once again, until a beep is heard. Normal operation then resumes.

Note that if both left-handed operation and Double-Click are selected, the buttons will function as Double-Click, Drag and Left Click, reading from left to right.

Also note that the function of the sockets for external switches reproduces the function of the internal buttons, according to the above settings.

Troubleshooting

If your **OPTIMAX JOYSTICK** unit does not operate correctly, please use the following guide to determine the cause. If, after following this guide, your unit still does not operate, please contact your supplier before returning it:

Symptom	Possible Cause/Remedy
No cursor movement	<ul style="list-style-type: none">• Units are not Paired. Follow Pairing procedure.• Battery is flat. Follow charging procedure.• Check USB or PS/2 connection to computer.
Cursor movement is erratic or sporadic	<ul style="list-style-type: none">• Battery may be flat. Follow charging procedure.• Check USB or PS2 connection to computer.• Units may not be correctly Paired. Follow procedure in Pairing section.
Units will not Pair- LED on Receiver unit is extinguished after 15 seconds and cursor does not move.	<ul style="list-style-type: none">• Ensure that Joystick is held within one metre (one yard) of Receiver while Pairing.• Check battery- charge if flat.

Maintenance

Your **OPTIMAX JOYSTICK** has no user serviceable parts. If repair is necessary the unit should be returned to Pretorian Technologies or an authorised Distributor.

Warranty

Your **OPTIMAX JOYSTICK** is warranted for 24 months from date of purchase against defects in manufacture or component failure. The unit is designed for domestic, educational, commercial and light industrial applications. Use outside these areas will invalidate the warranty. Unauthorised repair or modification, mechanical abuse, immersion in any liquid or connection to any equipment other than a host computer will invalidate the warranty.

All brand names used for identification purposes only, are the property of their respective owners and are acknowledged.

Pretorian
TECHNOLOGIES

Unit 37 Corringham Road Industrial Estate
Gainsborough Lincolnshire DN21 1QB UK
Tel +44 (0) 1427 678990 Fax +44 (0) 1427 678992

SimplyWorks® is a registered trademark of Pretorian Technologies Ltd

www.pretorianuk.com